
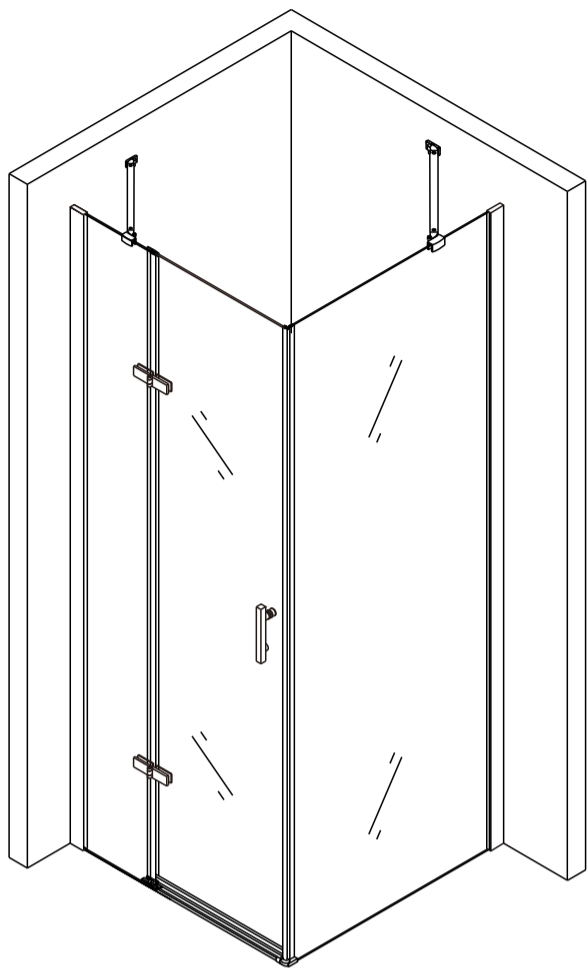
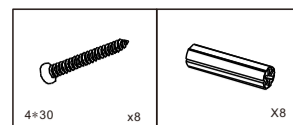




INSTALLATION MANUAL

TOOL PICTURE

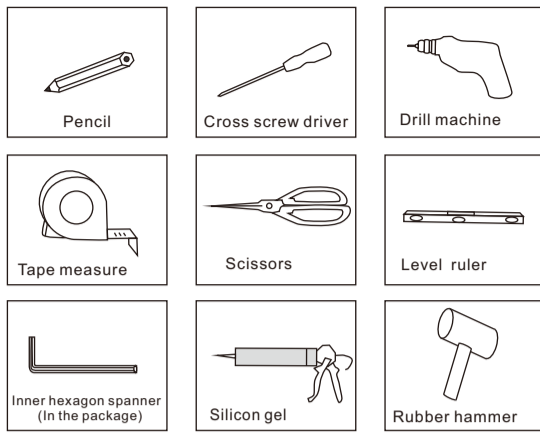

ATL-403






Accessory list

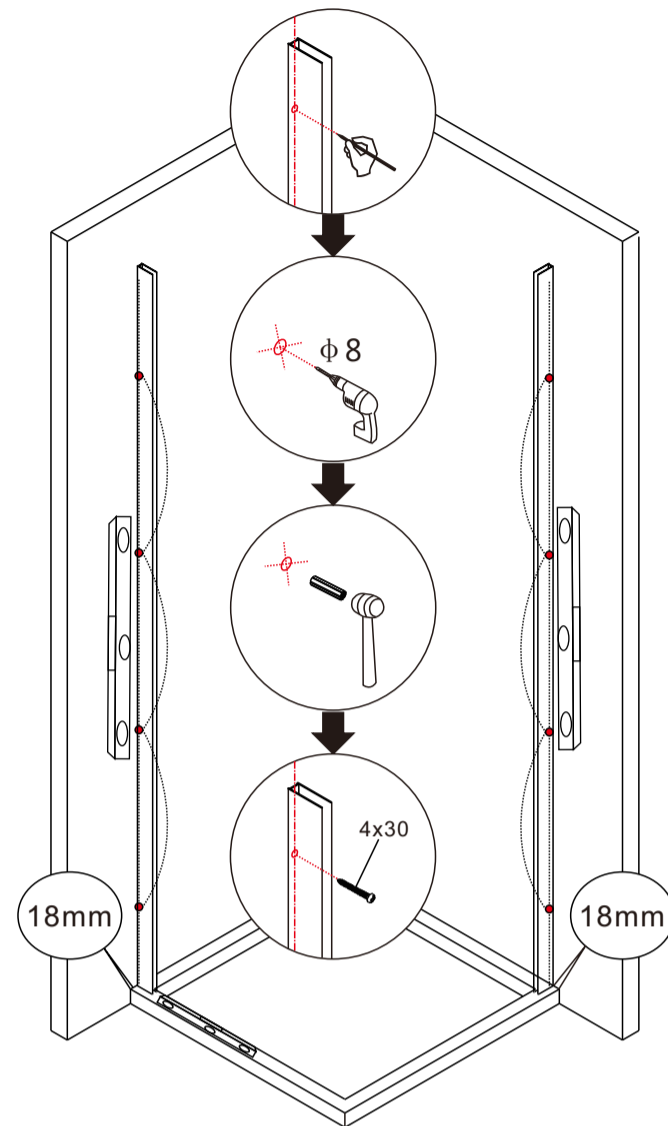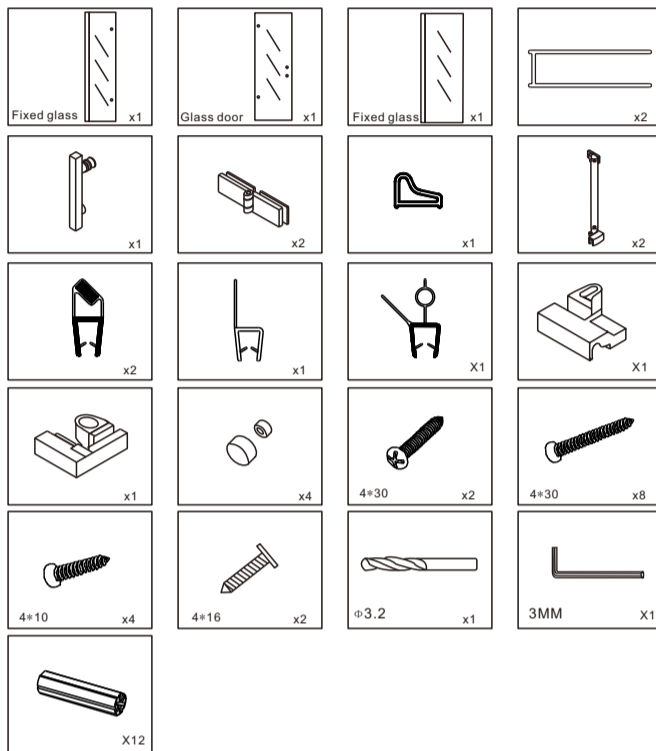

1

2



3

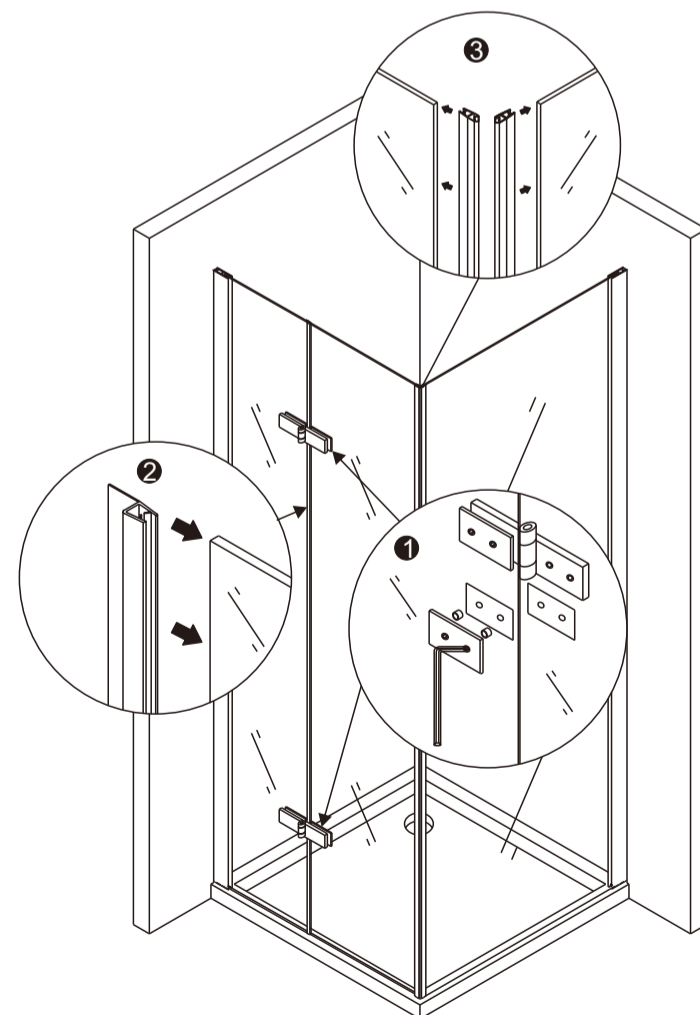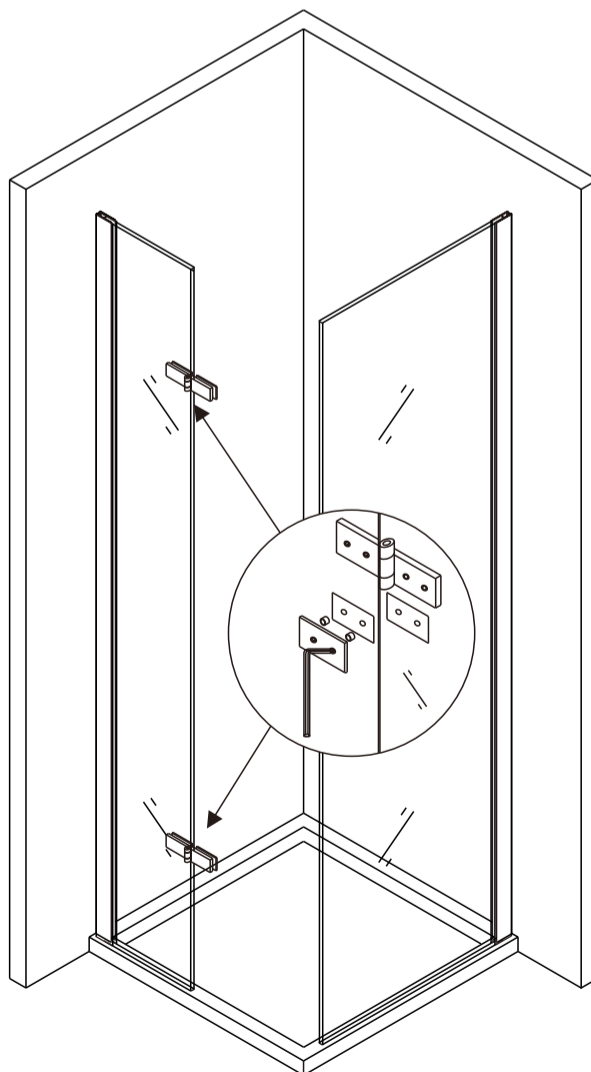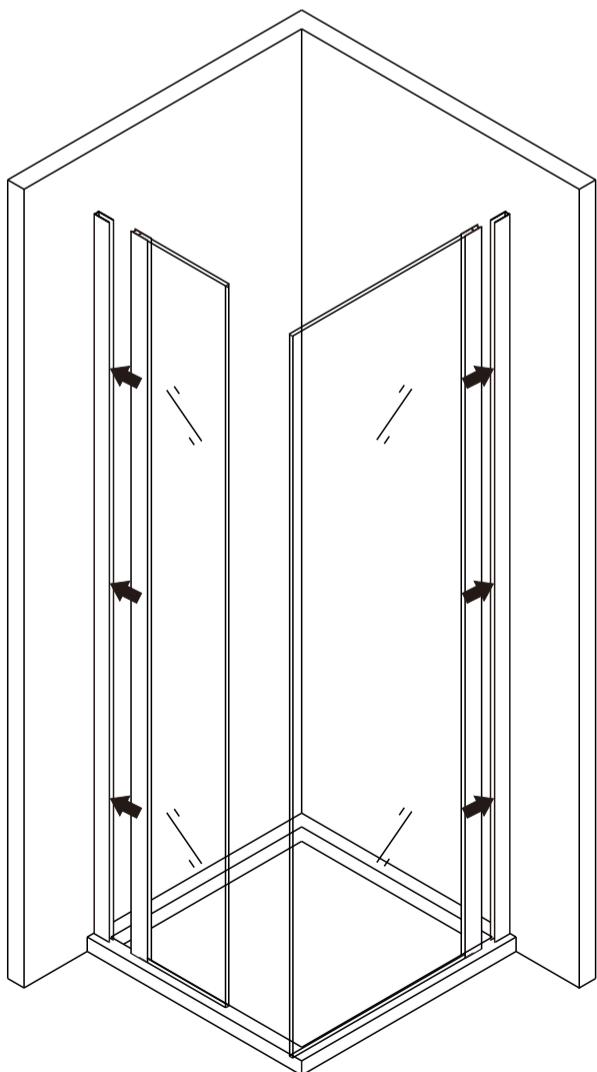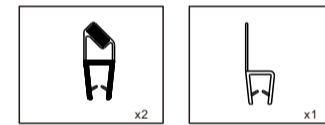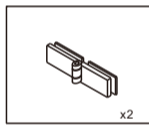



4

5



6

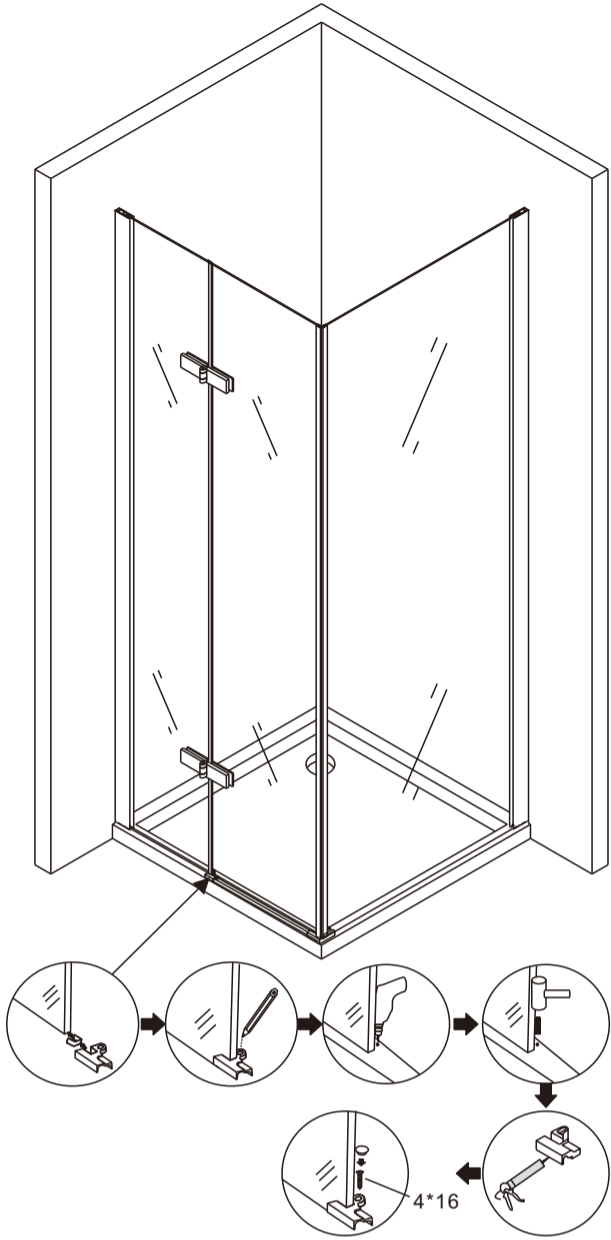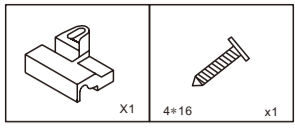



7

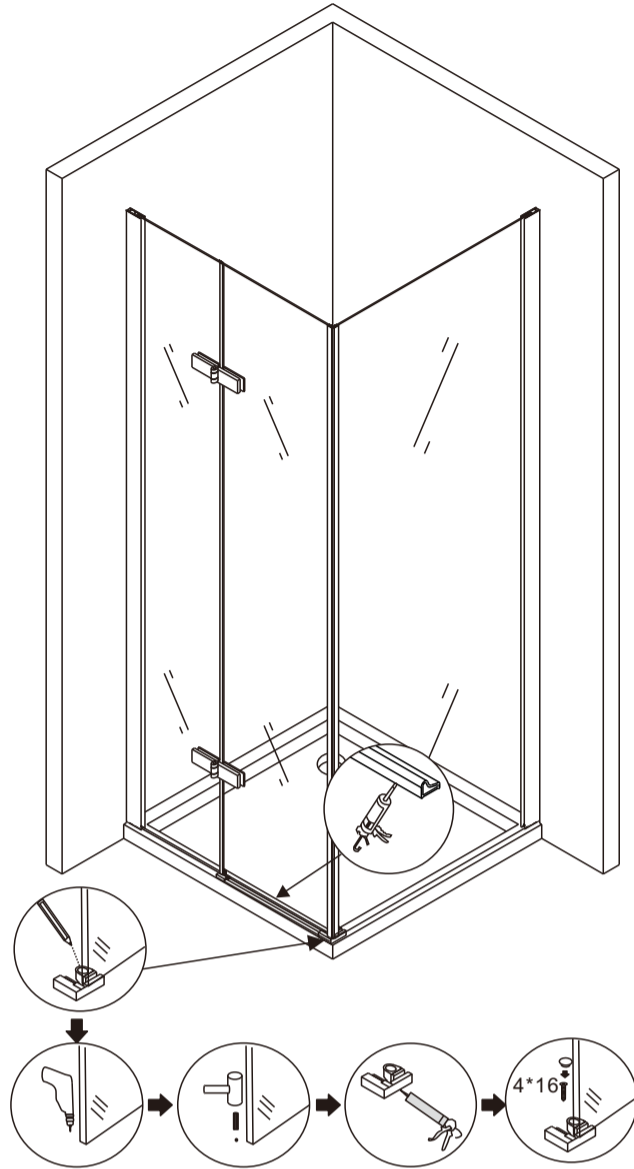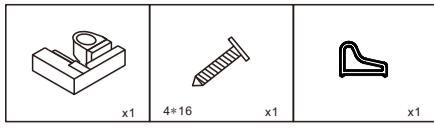



8

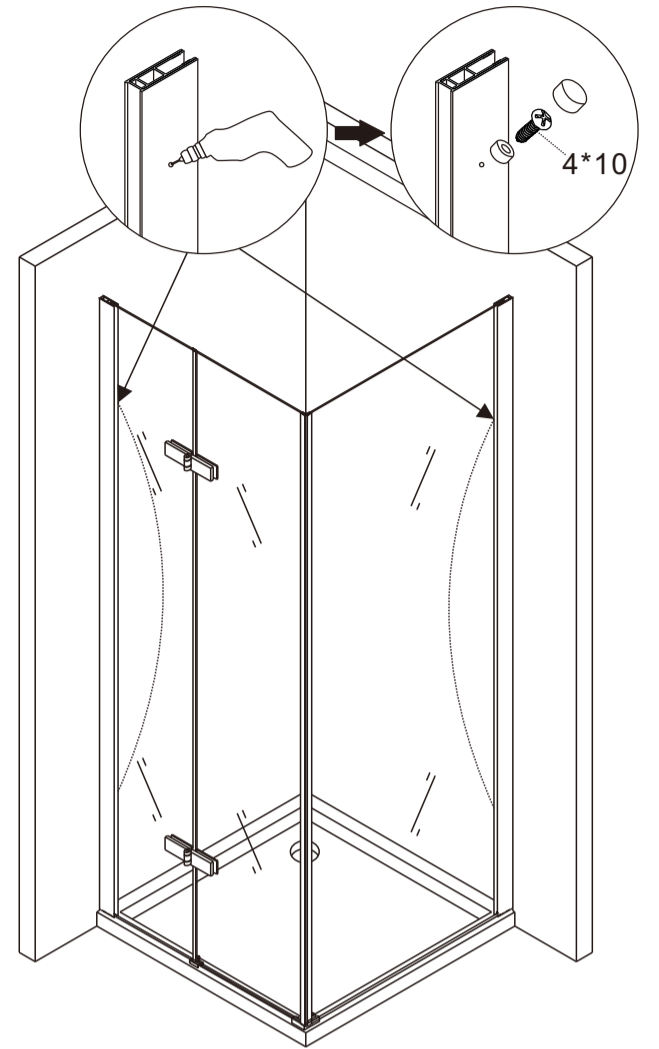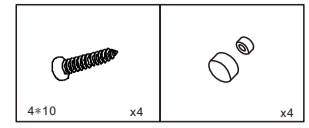

9

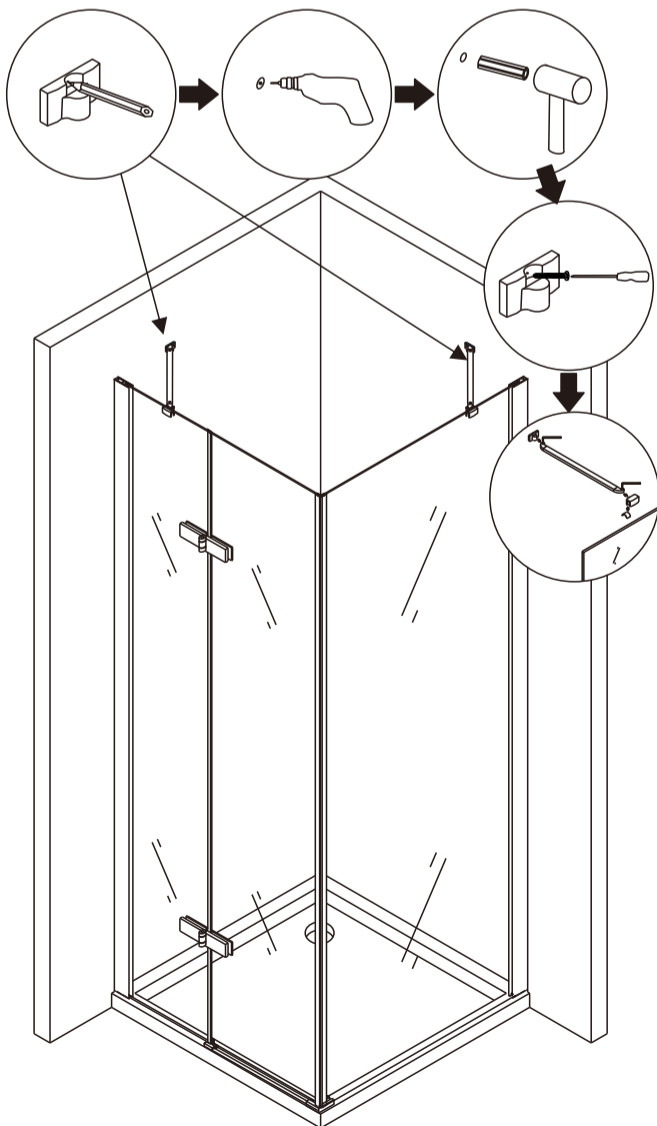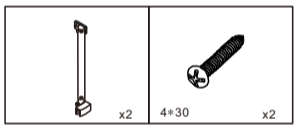

10

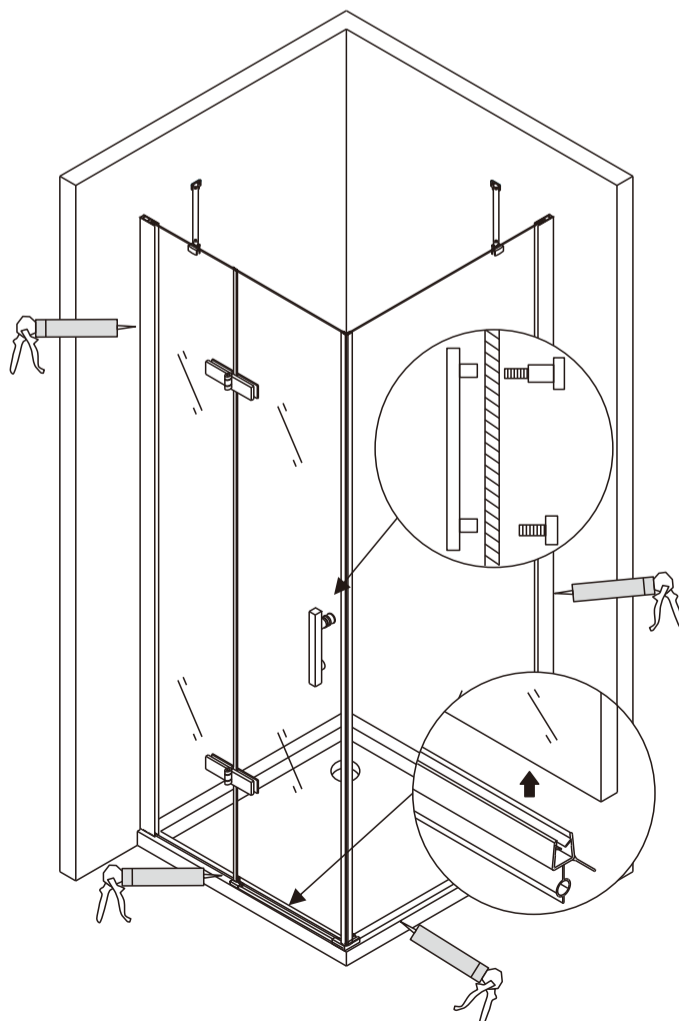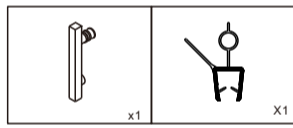

11

12